




## Remote wiring instructions

*This instruction sheet provides information on how to wire a remote up/down and tune operation to the EZTune.*

- 1) The female 4 pin connector (connector: 4 pin 0.062 series Molex 03-06-1044 pins: female, 0.062 series Molex 02-06-1103 or 02-06-1101(bulk)) are used for this cable wiring.
- 2) The pinout: pin 1- black (UP direction), pin 2- red-(DOWN direction), pins 3&4 TUNE (yellow/green).
- 3) Connect a center-off SPDT switch to pins 1 & 2, with the common of the switch to a 6-14vDC (or two momentary pushbuttons, with one side of each pushbutton connected to a 6-14vDC source. With either case, a negative ground is required to be tied back to the rig ground source.
- 4) Connect a momentary pushbutton to the pins 3 & 4 for remote tuning (optional).
- 5) The remote up/down will behave as a two-speed motor control, starting as slow speed, and changing to normal speed after approximately 4 seconds of continuous holding of the corresponding direction. This remote operation is in parallel with the internal up/down switches inside the EZTune.
- 6) A momentary press of the TUNE button will activate the rig TUNE function, and holding the button for over one second will cause the EZTune to enter the antenna park mode.

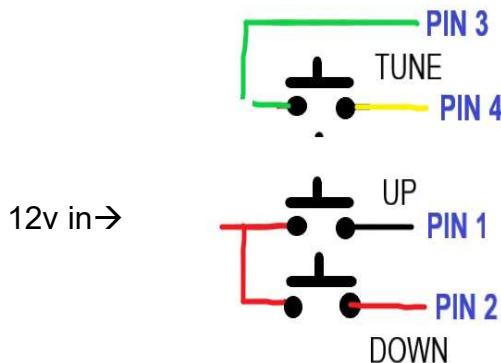

JT Communications 579 NE 44<sup>th</sup> Ave. Ocala, FL USA

352-236-0744    [support@jtcomms.com](mailto:support@jtcomms.com)    [www.tunematic.us](http://www.tunematic.us)

rev. A