

TuneMatic


Automatic Motorized Antenna Controller

FLEX-2 INTERFACE SUPPLEMENT

For FLEX radio 5000 series

Rev. 4/2/19

The Flex-2 interface requires user to set rig in AM mode, 10-20W output during TUNE or STORE operation of TuneMatic.

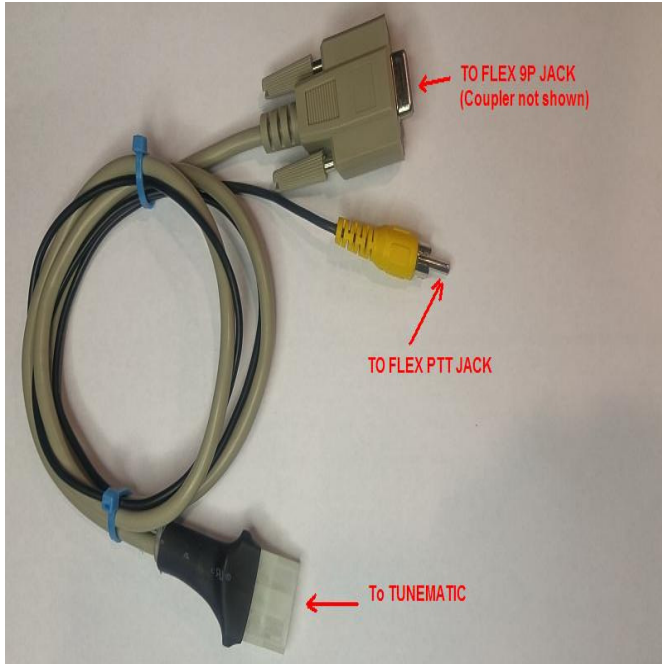

- a) Connect 9 pin DIN plug to FlexWire Peripheral Interface rig tuner(ATU) port (male-male coupler included)
- b) Connect RCA plug to Flex PTT jack.
- c) Connect 4 pin PC power style connector to TuneMatic interface port.
- d) Set rig to AM mode, 10-20W output during TUNE/STORE operations of TuneMatic. Then return rig to desired mode when tuning/storing is completed.

JT Communications- Ocala, FL 34470 USA 352-236-0744 www.tunematic.us