

# ~~TuneMatic~~


Automatic Motorized Antenna Controller

## ICOM IC-2 INTERFACE SUPPLEMENT

For ICOM: IC-705

Rev. 121021

### INTERFACE REQUIRES A LOW CURRENT SWITCHED 12V DC SOURCE TO ACTIVATE TUNEMATIC

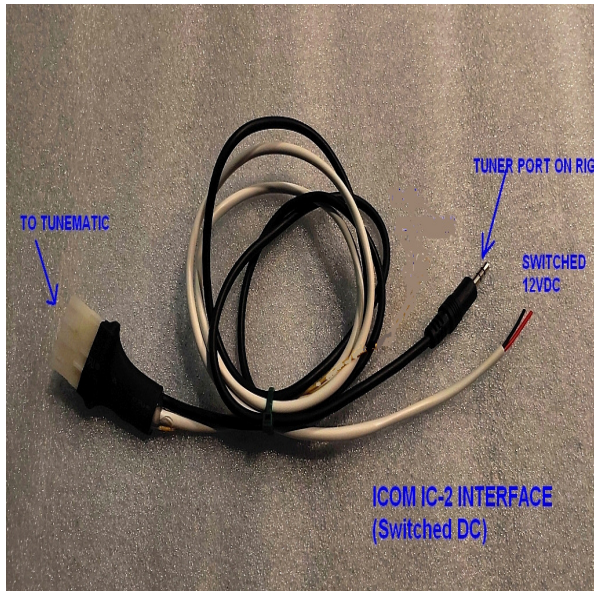

- Connect 3.4mm male plug to rig TUNER port.
- Connect 4 pin PC power style connector to TuneMatic interface port.
- Connect red/black pair to (150mA)min. switched12vDC source.

To enable TuneMatic, apply power to switched 12vDC leads.

*Rig will automatically key in CW mode when storing or tuning with TuneMatic, and return to desired mode when tuning/storing functions are completed.*

JT Communications, LLC Ocala, FL [www.tunematic.us](http://www.tunematic.us)  
352-236-0744