

TuneMatic

Automatic Motorized Antenna Controller

ICOM IC-3 INTERFACE SUPPLEMENT

For ICOM: IC-707 / 735 / 746 / 7610 / 7700 / 7800 / 7851

Rev. 3/21/22

The ICOM IC-3 interface requires user to set rig in AM mode, 10-20W output during TUNE or STORE operation of TuneMatic.

- 1) Connect DIN plug to rig ACC1 or ACC2 jack.
- 2) Connect white TuneMatic connector to TuneMatic interface port.
- 3) Set rig to AM mode, 10-20W output during TUNE/STORE operations of TuneMatic. Then return rig to desired mode when tuning/storing is completed.

JT Communications- Ocala, FL 34470 USA 352-236-0744 www.tunematic.us

