


# TuneMatic DA AMP relay connection

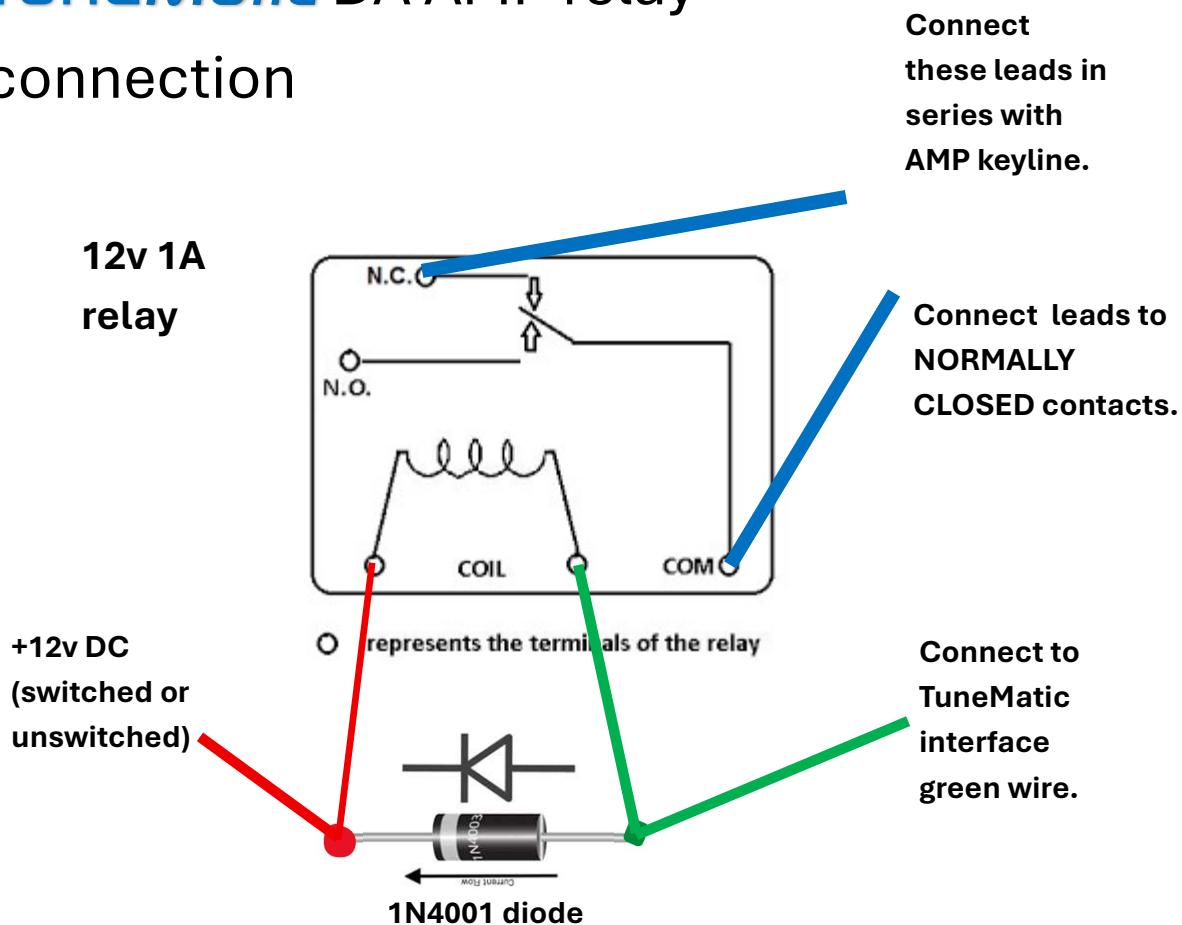

This circuit will allow the TuneMatic DA to unkey an external RF amplifier, allowing the amp to be bypassed when the TMDA is keying the transceiver.

**Note: connect the sampling TEE from the TMDA to the INPUT (transceiver) side of the external amp, so that damage does not occur to the TMDA from excess RF power.**

JT Communications- Ocala, FL 34470 USA  
352-236-0744      [www.tunematic.us](http://www.tunematic.us)