

# **TuneMatic**

*Automatic Motorized Antenna Controller*

## **YAESU LEG-1 INTERFACE SUPPLEMENT**


For YAESU: FT-757,767, 840,890,920. 1000, 2000, FTDX-101

**Rev. 4/21/21**

*The Yaesu LEG-1 interface requires user to set rig in AM mode, 10-20W output during TUNE or STORE operation of TuneMatic.*

- 1) Connect RED RCA phono plug rig +12V jackt
- 2) Connect WHITE(or BLACK) RCA phono plug to rig PTT jack.
- 3) Connect white molex socket to TuneMatic interface port.

4) Set rig to AM mode, 10-20W output during TUNE/STORE operations of TuneMatic. Then return rig to desired mode when tuning/storing is completed.

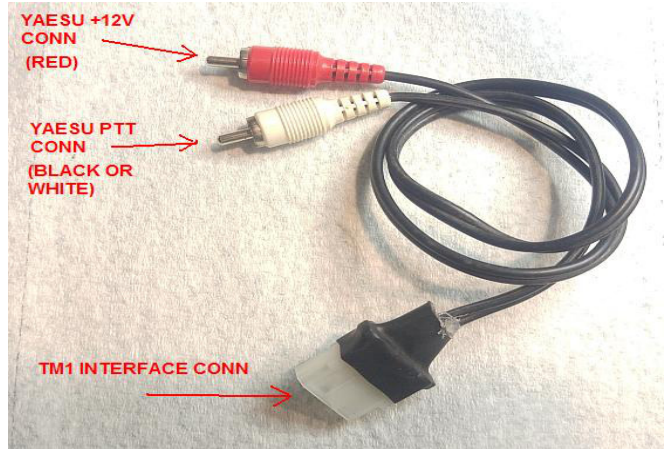

to

**JT Communications- Ocala, FL 34470 USA 352-236-0744 [www.tunematic.us](http://www.tunematic.us)**