

TuneMatic

Automatic Motorized Antenna Controller


YAESU LEG-4 INTERFACE SUPPLEMENT

For YAESU: FT-100, FT-450, FT-847, FTDX 10/1200/3000

Rev. 4/23/21

The Yaesu LEG-4 interface requires user to set rig in AM mode, 10-20W output during TUNE or STORE operation of TuneMatic.

- 1) Connect 6 pin mini-DIN plug to rig RTTY/DATA jack
- 2) Connect 8 pin mini-DIN plug to rig TUNER jack.
- 3) Connect white molex socket to TuneMatic interface port.
- 4) Set rig to AM mode, 10-20W output during TUNE/STORE operations of TuneMatic. Then return rig to desired mode when tuning/storing is completed.

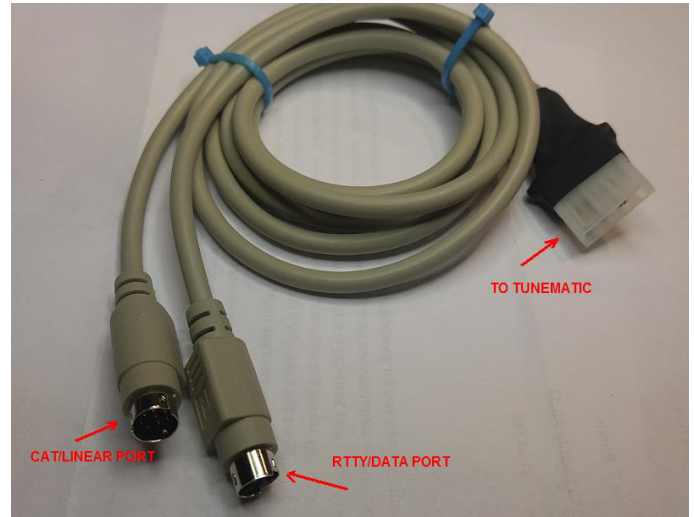

JT Communications- Ocala, FL 34470 USA 352-236-0744 www.tunematic.us