


TuneMatic


Automatic Motorized Antenna Controller

AMPLIFIER OPTION RELAY INSTALLATION INSTRUCTIONS

- 1) Remove all connections from unit and open cover
- 2) Unsolder connections on RIG coaxial connector (2 wires)
- 3) Pull coax through torroid, Leave ANT coax connections in place

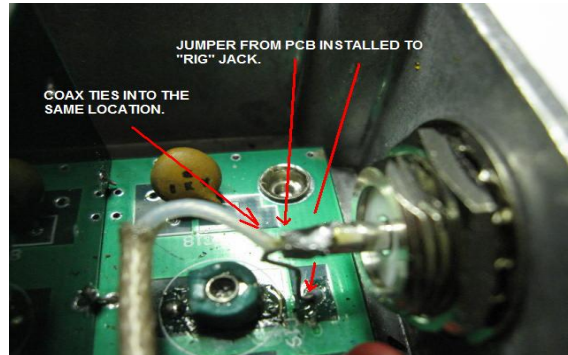

- 4) Remove screws from bottom of unit.
- 5) Slide grommet/cables out of case slot so that board can be removed
- 6) Remove board, beeper will remain in place.
- 7) Install components as shown

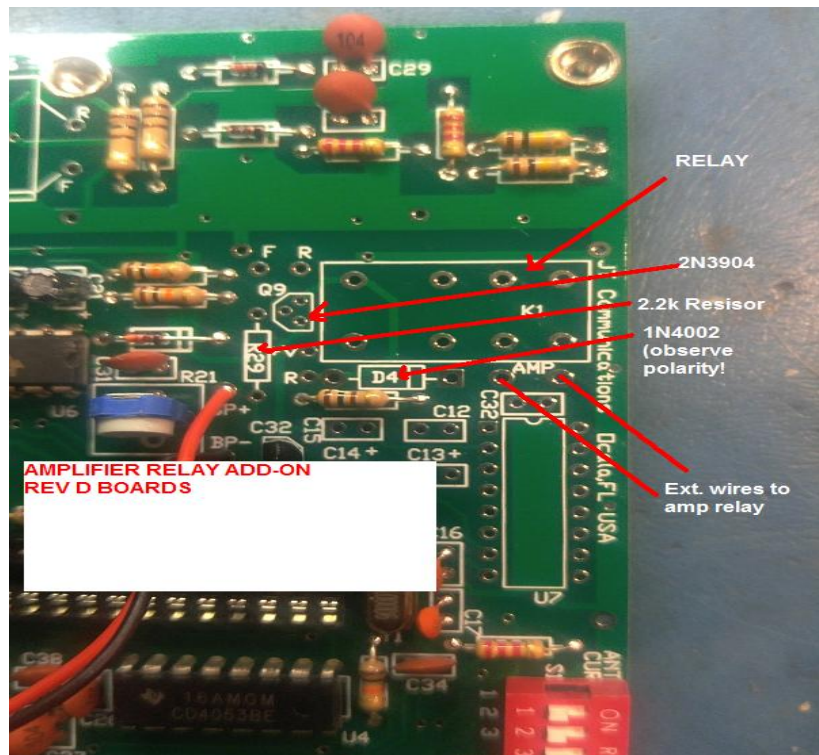

- 8) Reverse the steps above.

JT Communications, LLC 579 NE 44th Ave. Ocala, FL USA 34470