



PLUG INTO TUNEMATIC  
MOTOR POWER CABLE

MOTOR LEADS  
ARE POLARITY  
SENSITIVE.  
CHECK MOTOR  
DIRECTION  
BEFORE  
COMPLETION  
OF WIRING.

PROPER MOTOR WIRING IS WHEN  
ANTENNA MOVES TO LOWER FREQUENCY  
WHEN PRESSING "UP" ON REMOTE.

MOTOR LEAD RED

pin2

MOTOR LEAD BLACK

pin 1

SENSOR LEAD YELLOW

SENSOR LEAD BLUE/GRN

SENSOR LEADS NOT  
POLARITY SENSITIVE.

TarHeel, Diamond, and Scorpion antennas move UP  
for lower resonant frequency, HI-Q is opposite.

TUNEMATIC MOTOR PIGTAIL  
INSTRUCTIONS